Introduction to Circuit Analysis Laboratory

Lab Experiment 3

Resistive Circuit: Resistance and Voltage Measurement

Electrical components/elements can be connected to form a network or circuit. Depending on the elements interconnection we can determine the equivalent resistance and voltage distribution among the elements and determine whether they are series, parallel, or series-parallel circuit.

3.1. Resistance and Voltage Measurements

A basic electric circuit is built of a source, such as a battery, a switch, interconnection wires, and a load, such as a lamp. When the electric circuit is built and the switch is closed, flow of charges will travel in a closed path causing the light of the lamp to come on. These flow of electrons are known as electric currents. Electric currents has **magnitude** and **direction**. The magnitude and direction of each current is a measurable fact using an ammeter.

Even ammeters are available as individual instruments, they are combined instruments called Multimeter or Volt-Ohm-Milliammeter, VOM. Figure 3.1 shows both digital and analog multimeters. Digital multimeter uses a numerical readout, while analog multimeter uses a needle pointer to indicate the measure values.





Figure 3.1 – Digital and Analog MultiMeter

3.1.1. Voltage Measurement Using a Digital MultiMeter, DMM



Before placing the testing probes in the circuit to measure voltage, we have to set our DMM to measure voltage. To set up the DMM, make sure that the red probe is connected to the $V\Omega mA$ socket and the black probe to the COM socket.

To measure a dc quantity, set the measure dial to the desired dc voltage range V===. For example, if we are measuring no more than 9 V, you can set the measure dial to 20 V dc volts. But if we want to measure 9 V and we set the measure dial to 2 V, the DMM will show an Over Load message, why? Because the voltage range in the DMM presents the highest measurable voltage. That is why, if the measure dial is selected to 2 dc V, then the highest voltage that you can measure is 2 dc V.



Once the DMM is set up to measure voltage, the next step is to measure the voltage across a component in the circuit. Once the circuit is power, you can place the DMM leads across the component whose voltage we want to measure.

This technique is applied because voltage is the potential difference between two points. It is also good to remember that to measure the voltage across a component, the DMM has to be in *parallel* to the measure component.

3.1.2. Resistance Measurement

To measure resistance, firstly we have to set the DMM to measure resistance. To set up the DMM, make sure that the red probe is connected to the $V\Omega mA$ socket and the black probe to the COM socket. After it, if we don't know the resistance value, we set the measure dial to the highest resistance, and once the DMM is connected to circuit to measure resistance, we lower the measure dial until we get a reading from the DMM.



Once the DMM is set up to measure resistance, the next step is to place the DMM's probes across the component whose resistance we want to measure. We basically place the DMM's probes in *parallel* to the measure component.

Lab Experiment Procedure

Part 1 - Resistive Circuit


Exercise 3.1 - Building a Resistive Circuit from a Circuit Schematic

- Obtain the resistors needed to build the circuits according to Table 3.1.
- Before building the following circuits, measure the resistance of each resistors using a DMM and record the measurements in Table 3.1.

Elements	Actual Value (include unit)	Measured Resistance
		(include unit)
R_1	100 Ω (brown, black, brown, gold)	
R_2	330 Ω (Orange, orange, brown, gold)	
R ₃	47 Ω (yellow, violet, black, gold)	
R ₄	470 Ω (yellow, violet, brown, gold)	
R ₅	220 Ω (red, red, brown, gold)	
	Table 3.1 – Components measi	irements

- Having the components, we can start making the connection of each resistor according to circuits.

a) Building a resistive circuit with one resistor

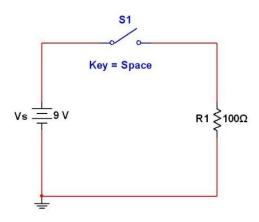


Circuit 3.1 – Resistive circuit with 1 resistor


There are different ways to build and make connections among the elements within the circuit. One way to do so is by the order of the elements:

Step 1a)


Circuit Schematic	Description
Node 5 (Row J) S1 Key = Space R1 \$100Ω	To build the circuit, we need to place the switch first. Put the middle leg of the switch in a node 5 and Row H, which needs to be connected to "+". The right leg of the switch needs to be connected to one side of R1. So put a jumper wire in a hole of "+" and in a node 5 and Row J. And put another wire between nodes 6 and 13 of Row F. It should be OFF when you slide the button to the left and ON when the button to the right.

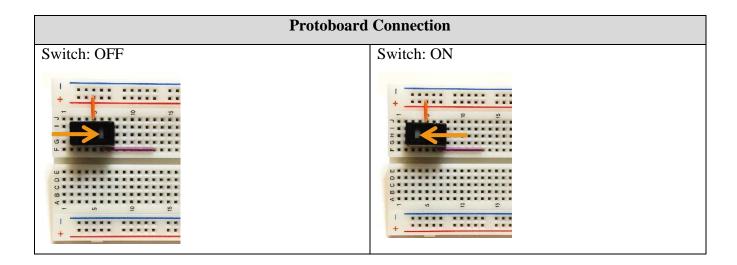

Step 2a)

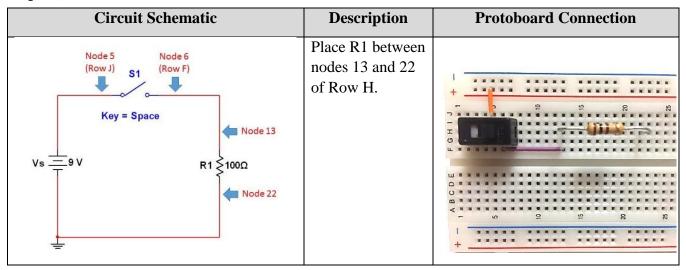


Step 3a)

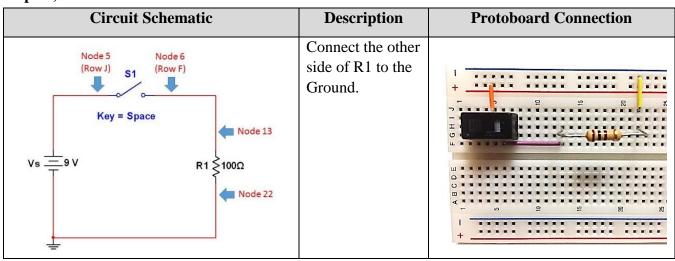

Once the circuit is built, turn the switch to a close or ON position and measure the total resistance, by placing the multimeter testing probes in between the + and – node of the breadboard. Record the measure resistance in Table 3.2.

b) Building a resistive circuit with 3 resistors

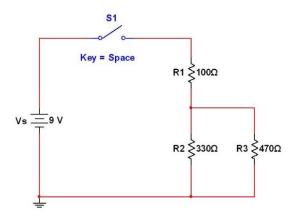


Circuit 3.2 – Resistive circuit with 3 resistors


Step 1b)

Circuit Schematic	Description	Protoboard Connection
Node 5 (Row J) S1 Node 6 (Row F) Node 13 Node 13 Node 22 Node	From the Circuit from step 3a, remove the jumper wire to the Ground.	15 F G H I J H J H

Step 2b)

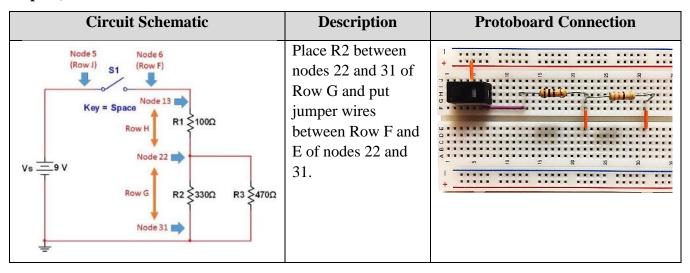


Step 3b)

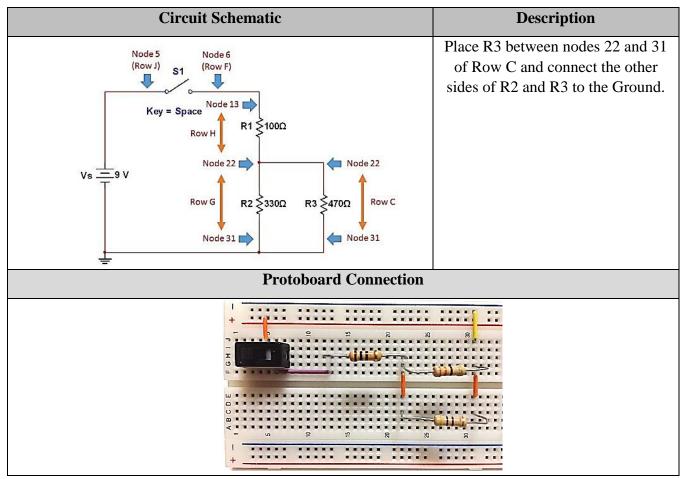


Once the circuit is built, turn the switch to OPEN or OFF position and measure the total resistance and record the measure resistance in Table 3.2.

c) Building a resistive circuit with 5 resistors

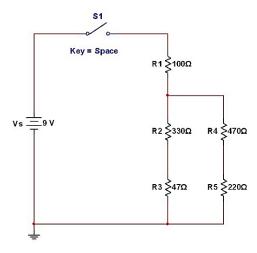


Circuit 3.3 – Resistive circuit with 5 resistors

Step 1c)

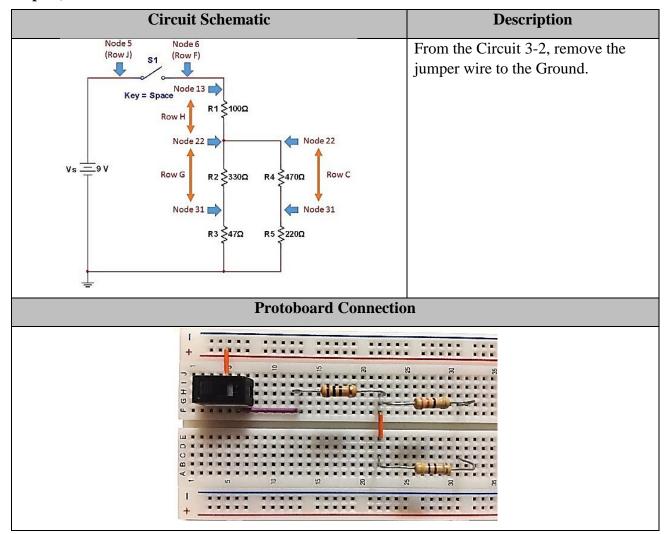

Step 2c)

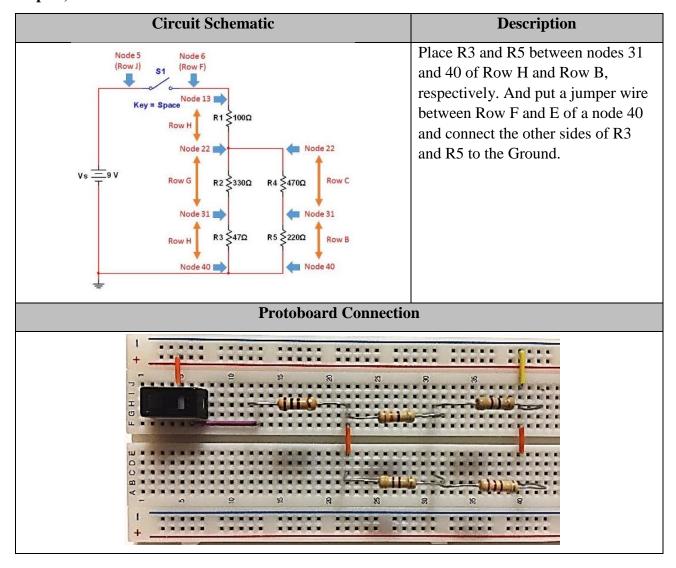

Once the circuit is built, turn the switch to OPEN or OFF position and measure the total resistance and record the measure resistance in Table 3.2

Element	Measured Resistance (include unit)		
Total Resistance (Circuit 3.1)			
Total Resistance (Circuit 3.2)			
Hint: calculated total resistance is 511.41Ω			
Total Resistance (Circuit 3.3)			
Table 3.2 – Total resistance measurement			

Part 2 - Measuring the voltage in a resistive circuit

- Before measuring the voltage, check double check Circuit 3.3's connections with the lab's instructor.
- Prepare the DMM to measure voltage.
- To measure the voltage drops at a resistor, simply place the DMM measurement's probes "across" the resistor as shown in Figure 3.2.

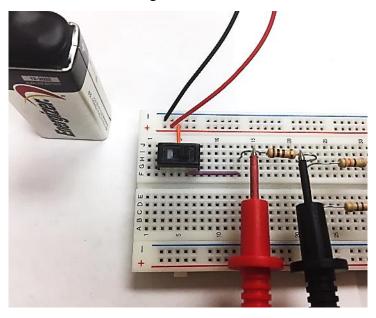


Figure 3.2 – Measuring voltage across a resistor


- Turn the switch ON of Circuit 3.3
- Measure the voltage across each resistor in Circuit 3.3 and record the measurements in Table 3.3.

Voltage Label	Voltage Magnitude
Vs	
V_{R1} Hint: the calculated V_{R1} is 2.62 V	
V_{R2}	
V_{R3}	
V_{R4}	
V_{R5}	
Table 3.3 Voltage Measuremen	nt from Circuit 3.3

To measure the voltage at a node with respect to ground

Be aware that in the field of electronics the word **ground** is often used to indicate the **reference point** rather than physical ground. In this case, the reference point is the negative node of the protoboard.

- Clip one negative lead of the DMM to the circuit ground (point E) or reference point (the negative node)
- To measure the voltage at each node of Circuit 3.3, clip the other meter lead, (the one connected to the meter jack labeled with a plus sign, usually the red lead) to each node in succession (namely point A, B, C and D) as shown in Circuit 3.4.

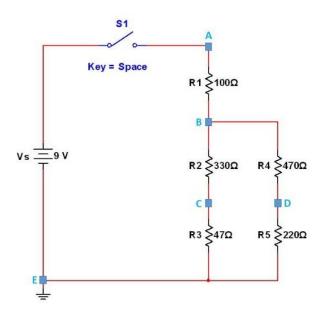

Circuit 3.4 – Resistive circuit, Circuit 3.3, with label A, B, C, E, and E in each node

- Record the each measured voltage in Table 3.4.
- Include the polarity of the voltage with respect to ground in Table 3.4. Positive voltages are displayed with no sign by the DMM, while negative voltages are shown with a minus sign. For Circuit 3.3, all the nodes are positive with respect to ground because the battery's negative terminal is taken to be reference (ground).

NOTE: If an analog meter were used, a negative voltage would cause a meter deflection off the left side of the scale possibly causing meter damage. An analog meter can only measure positive voltages. To fix this error, swap the DMM's leads position, measure the voltage again, and mark the reading as a negative value.

Node	Display number in DMM	Voltage written as		
A (sample)	9	$V_A = +9V$		
В				
C				
D				
Table 3.4 Voltages from different node to ground				

Measuring the voltage between two nodes (Double subscript notation)

In the electronics field, it is common to represent the voltage between two points in the circuit using a double subscript. V_{AB} indicates the voltage at point A with respect to point B. If one were to measure this voltage with a DMM, one would put the black meter lead at the point indicated by the second (reference) subscript and the red meter lead at the point indicated by the first subscript. Therefore, to measure V_{AB} , the black meter lead is connected at node B and the red meter lead at node A. This is exactly the same as measuring the voltage across the resistor R1.

For example, to measure V_{BA} , one would put the **red meter probe** at node **B**, and the **black meter probe** at node **A**. This would obviously result in the same voltage but the meter would indicate a negative sign because the voltage in node B is lower than the voltage in node A. This shows that $V_{BA} = V_B - V_A$

- From Circuit 3.4, measure the voltages indicated in Table 3.5.
- It is also important to notice that $V_{AB} = V_A$ V_B , where the voltage of V_A and V_B is obtain from Table 3.4. Using those information, calculate each node voltage as indicated in Table 3.5.
- Complete Table 3.5.

Voltage to be measured	Measured Voltage	Written as	Calculation using Table 3.5 Voltage at first node minus voltage at second node	Comment
V_{AB}				
V _{BA} (Sample)	-2.6 V	$V_{BA} = -2.6V$	$V_{BA} = V_B - V_A$ $V_{BA} = 6.4V - 9V = -2.6V$	- sign indicates B is lower in voltage than A
V _{BC} (Sample)	+5.6 V	$V_{BC} = +5.6V$	$V_{BC} = V_B - V_C$ $V_{BC} = 6.4V - 0.8V = +2.6V$	+ sign indicates B is higher in voltage than C

V _{CB}				
V_{DB}				
V_{CA}				
V _{AC}				
Table 3.5 – Measuring and calculating voltage between nodes				

Measuring the voltage rises and the voltage drops

When moving around a circuit in a particular direction, if one goes across a circuit element and encounters a voltage polarity from – to + then the voltage is considered a voltage rise and is usually assigned a + sign. For example, going from B (black probe) to A (red probe) goes from – to + therefore it is considered a voltage rise of 2.6V (or $V_{AB} = +2.6V$). Alternately, if one encounters a voltage polarity from + to – then the voltage is considered a voltage drop and is usually assigned a – sign. Here for example, going from A (black probe) to B (red probe) goes from + to – therefore it is considered a voltage drop of 2.6V (or $V_{BA} = -2.6V$). Note that a voltage is either a rise or a drop depending on the direction taken, which is usually use the test probe as reference. Don't forget that all voltage measurements were done across elements or from one terminal to another.

- Using the node measurements from Table 3.4 complete Table 3.6. Remember, **Ground** is equal to 0 V

To Node	From Node	Calculation using Table 3.5	Rise or drop?	Write + for rise Write - for drop
A	C	Sample Node A (Table 3.4) = 9 V, Node C (Table 3.4) = 0.8V 9 V - 0.8 V = 7.2 V	Rise	$V_{AC} = +7.2V$
D	A			
Ground (E)	C			

D	Ground (E)			
В	D			
Table 3.6 Voltage rises and voltage drops				

- Turn off all lab and testing equipment, dissemble the circuit, and place all components back in the lab kit. Answer the following lab questions.

Questions

- 1. A student built a five resistors circuit, as circuit 3.3. Then, before power the circuit, student set a DMM and try to measure the total resistance by measuring the positive and the negative node of the circuit. The DMM shows 'OL'. What could be the reasons the DMM is showing OL and how would you troubleshoot this error? Mention two alternatives to troubleshoot this error and explain.
- 2. For a given circuit, when you measure a voltage from node C to node A, the multimeter displays -3.5V. What does the negative sign mean? Which node has the lower voltage? Explain your answer

Answers:

Student's Signature:	_Lab instructor's signature	_Date:
	LAB EXPERIMENTS ENDS HERE	